 


### Flow Solutions

**PUSHFIT** 

# Fitting Instructions - Pushfit

#### **Pushfit Assembly**



Insert liner into pipe then measure and mark correct insertion depth against fitting as shown.



Push pipe into fitting up to the mark ensuring the pipe has been pushed passed the internal 'O' ring.



Make sure the mark on the pipe is inline with the end of the fitting.

Note: For assembly of Cu/PB/PEX, follow instructions above but ensure pipe manufacturers liner is fitted where applicable as per their instructions.

## **Pushfit Disassembly**



Using the Pushfit wrench, turn the nut anticlockwise to release pipe from fitting.



If the fitting is to be reused, the split ring, grip ring, and nut MUST be inserted in the order shown.



The Cu/PB/PEX fitting may be undone to facilitate the withdrawal of the pipe, but the metal grip ring cannot be removed and reused. A new fitting will be required.

#### **Pushfit Universal**



Prepare the pipe by removing any unsound material adhering to the pipe then cut and de-burr pipe as necessary.



Push the pipe into the fitting up to the internal stop.



Tighten firmly using a PLASSON wrench or similar.